

I/O Relay Terminal G70V

I/O Relay Terminals with 16 Points and Push-In Plus Terminal Blocks to Downsize Control Panels Reduce Wiring Time

- Wiring time is reduced by 60% compared to traditional screw terminals.
- I/O Relay Terminals with 16 points accept G2RV Slim I/O Relays or G3RV SSRs.
- Work is reduced even further with one-step cable connection to the PLC.
- Diode provided for coil surge absorption.
- Operation indicators for immediate recognition of I/O signal status.
- DIN Track or screw mounting.
- New models provide internal common connections between I/O terminals to further reduce wiring work. (input models: 16 point/common; output models: 4 points/common)

* According to OMRON actual measurement data from November 2015.



Refer to Safety Precautions on page 15.











For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

Model Number Legend

G70V - \(\bigcap \) \(\big

(1) Mountable Relays

S: Relays

Z: Sockets

(2) Input/Output Classification

I: For input

O: For output

(3) I/O Specification

C: Contacts

(Applicable when (2) is O (for output) (relay output).)

D: DC (Applicable when (2) is I (for input) (coil for input).)

M: AC/DC (Applicable when (1) is Z (Sockets).)

(4) Number of I/O Points

16: 16 points

(5) Terminal Type

P: Push-In Plus terminal blocks

(6) Common Line on Connector Side Blank: NPN

1: PNP

(7) Common Line on Terminal Block Side

Blank: No internal connections

C4: Every 4 points internally connected at terminal

 
block bottom row

C4-D: Every 4 points internally connected at terminal


block middle row

C16: 16 points internally connected







(For Output NPN)

 

(For Input PNP)

 



 

Ordering Information

I/O Relay Terminals

Terminals	Classification	Points	Common Line	Rated	Model	
			Terminal Block Side	Connector Side	voltage	Wodel
	Input *1		No internal connections	NPN (- common)		G70V-SID16P
				PNP (+ common)	-	G70V-SID16P-1
			4.C. marinta intermedit. commented	NPN (- common)		G70V-SID16P-C16
Push-In Plus		10	16 points internally connected	PNP (+ common)	24 VDC	G70V-SID16P-1-C16
terminal blocks	Output *2	16 ut *2	No internal connections	NPN (+ common)	24 VDC	G70V-SOC16P
				PNP (- common)		G70V-SOC16P-1
			Every 4 points internally connected at terminal block bottom row	NPN (+ common)		G70V-SOC16P-C4
				PNP (- common)		G70V-SOC16P-1-C4

^{*1.} Mountable Relays: G2RV-1-S-AP-G DC21V.

I/O Terminal Sockets

Applicable I/O Relay Terminal	Classification	Common L	Common Line		
Applicable I/O nelay Terminal	Ciassification	Terminal Block Side	Connector Side	Model	
G70V-SID16P		No internal accounting	NPN (- common)	G70V-ZID16P	
G70V-SID16P-1	lanut	No internal connections	PNP (+ common)	G70V-ZID16P-1	
G70V-SID16P-C16	- Input	16 points interpelly connected	NPN (- common)	G70V-ZID16P-C16	
G70V-SID16P-1-C16		16 points internally connected	PNP (+ common)	G70V-ZID16P-1-C16	
G70V-SOC16P		No internal connections	NPN (+ common)	G70V-ZOM16P	
G70V-SOC16P-1	=	No internal connections	PNP (- common)	G70V-ZOM16P-1	
G70V-SOC16P-C4	Output	Every 4 points internally connected	NPN (+ common)	G70V-ZOM16P-C4	
G70V-SOC16P-1-C4	Cutput	at terminal block bottom row	PNP (- common)	G70V-ZOM16P-1-C4	
*		Every 4 points internally connected at terminal block middle row	PNP (- common)	G70V-ZOM16P-1-C4-D	

Note: Relays are not mounted to the G70V-ZID/ZOM16P(-1) I/O Terminal Sockets. Combine the I/O Terminal Sockets with Slim I/O Relays or Slim I/O SSRs. *The G70V-ZOM16P-1-C4-D does not come with SSRs. Use Slim I/O SSRs (for DC: G3RV-D03SL).

Accessories (Order Separately)

Mountable Relays

Applicable I/O Relay Terminal	Classification	Туре		Model	
G70V-SID16P(-1)(-C16) G70V-ZID16P(-1)(-C16)	Input	Slim I/O Relays *1		G2RV-1-S-AP-G DC21	
		Slim I/O Relays	No Latching Lever *2		G2RV-1-S-G DC21
0-0400040740404			Latching Lever		G2RV-1-SI-G DC21
G70V-SOC16P(-1)(-C4) G70V-ZOM16P(-1)(-C4)	Output		For AC	Zero cross function	G3RV-202S DC24
470V 20M101 (1)(04)		Slim I/O SSRs	FOI AC	No zero cross function	G3RV-202SL DC24
			For DC		G3RV-D03SL DC24
G70V-ZOM16P-1-C4-D *3	Output	Slim I/O SSRs	For DC		G3RV-D03SL DC24

Note: To use Slim I/O SSRs, either remove the Slim I/O Relays to mount them or order a I/O Terminal Sockets and I/O SSRs separately and combine them.

When ordering, designate the rated voltage.

^{*2.} Mountable Relays: G2RV-1-S-G DC21V.

^{*1.} G2RV-1-S-AP-G Slim I/O Relays are mounted to G70V-SID16P(-1)(-C16) I/O Relay Terminals as a standard feature.

^{*2.} G2RV-1-S-G Slim I/O Relays are mounted to G70V-SOC16P(-1)(-C4) I/O Relay Terminals as a standard feature.

^{*3.} The G70V-ZOM16P-1-C4-D does not come with SSRs. Use Slim I/O SSRs (for DC: G3RV-D03SL).

Cables for I/O Relay Terminals XW2Z-R

• Cable with Loose Wire and Crimp Terminals: XW2Z-RY□C • Cable with Loose Wires: XW2Z-RA□C · Cable with connectors • Fujitsu connectors (1:1): XW2Z-R□C (1:2): XW2Z-RI□C-□ XW2Z-RO□C-□ (1:3): XW2Z-R□C-□-□ · MIL connectors (1:1): XW2Z-RI□C XW2Z-RO□C (1:2):

XW2Z-RI□-□-D□ XW2Z-RM□-□-D□ XW2Z-RO□-□-D1

Refer to Connecting Cables on page 17 for details.

Labels

Appearance	Model	Minimum order (sheet) (quantity per sheet)
	XW5Z-P2.5LB2	5 (1 sheet / 72 pieces)


Accessories for DIN Track Mounting

Appearance	Name		Model	Minimum order (quantity)
	DIN Tracks	1 m	PFP-100N	1
		0.5 m	PFP-50N	
3			PFP-M	10
			PFP-S	10

^{*}These products must be ordered in sets of 10.

Refer to your OMRON website for details on the PFP- \square .

Mounting Example Using the Accessories Mounting to DIN Track

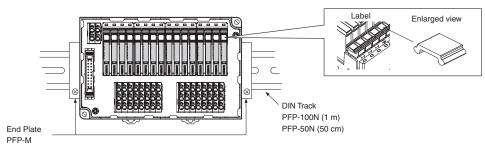

Specifications

Coil Ratings (Common to Input/Output per Relay)

Item Rated voltage (V)	Rated current (mA)	Coil resistance (Ω)	Must operate of rated voltage	Must release of rated voltage	Maximum voltage of rated voltage	Power consumption (mW)
24 VDC	13.3	1575	80% max.	10% min.	110%	Approx. 280

- Note: 1. The rated current and coil resistance are measured at a coil temperature of 23°C with a tolerance of ±15% for coil resistance.
 - 2. The operating characteristics are measured at a coil temperature of 23°C.
 - 3. The value for maximum voltage is the maximum value within the allowable voltage fluctuation range for the relay coil's operating power supply. Continuous operation at this voltage is not within product specifications.
 - **4.** The rated current includes the current for the indicators on the I/O Relay Terminal.

Contact Ratings (G2RV-1-S-G I/O Relay)

Classification	For input	For output		
Item	Resistive load (cos¢=1)	Resistive load (cos	Inductive load (cosφ=0.4 L/R=7 ms)	
Rated load	50 mA at 30 VAC 50 mA at 36 VDC	6 A at 250 VAC 6 A at 30 VDC	2.5 A at 250 VAC 2 A at 30 VDC	
Rated carry current	50 mA	6 A/point, 10 A/common		
Max. switching voltage	30 VAC, 36 VDC	250 VAC, 125 VDC		
Max. switching current	50 mA	6 A/point, 10 A/common		
Maximum switching capacity		1,500 VA 180 W 500 VA 60 W		
Error rate (reference value) *	1 mA at 100 mVDC	10 mA at 5 VDC		
Electrical endurance	5,000,000 operations min.	NO contacts: 70,000 operations min. NC contacts: 50,000 operations min.		
Mechanical endurance	5,000,000 operations min.	5,000,000 operations min.		

^{*}The above values are for a switching frequency of 120 operations/min.

Characteristics

Model Item		G70V-SID16P(-1)(-C16) (Input, DC coil)	G70V-SOC16P(-1)(-C4) (output, DC coil)			
Contact form		SPST-NO × 16	SPDT×16			
Contact ma	terial	Ag alloy + Au plating	Ag alloy			
Contact res	istance * 1	150 m Ω max.				
Must Opera	te time * 2	20 ms max.				
Release tim	e * 2	40 ms max.				
Max.	Mechanical limit	18,000 operations/h				
frequency At rated load 1,800 operations/h		1,800 operations/h (under rated load)				
Insulation re	esistance	100 M Ω min.				
Dielectric st	rength	Between coil and contacts: 2,500 VAC for 1 min				
Vibration re	sistance	100 m/s ²				
Shock resis	tance	100 m/s², 3 times each in 6 directions along 3 axes				
Noise immu	nity	Noise level: 1.5 kV; pulse width: 100 ns to 1 μs				
Ambient operating temperature		-40 to 55°C (with no icing or condensation)				
Ambient operating humidity		35% to 85%				
LED color Power supply		Green				
D 00101	I/O	Yellow				
Weight		Approx. 350 g	Approx. 370 g			

Note: The above values are initial values.


***1.** Measurement: 1 A at 5 VDC. ***2.** Ambient temperature: 23°C.

Applicable Standards

• UL 61010-2-201, CAN/CSA-C22.2 No.61010-2-201, TÜV (EN 61810-1)

Engineering Data (Reference Value)


Endurance Curve (NO Contacts) G70V-SOC16P(-1)(-C4)

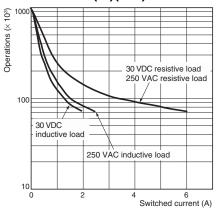


Note: These data are actual measured values that were sampled from the production line and prepared in graph format, and are for reference purposes only. A relay is manufactured by mass production, and as a basic rule must be used with allowance made for a certain amount of daviation

Load Current vs. Ambient Temperature


G70V-SOC16P(-1)(-C4)

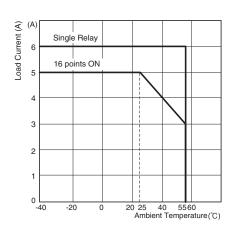

G3RV-202S DC24 G3RV-202SL DC24

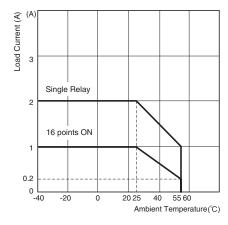


G3RV-D03 DC24

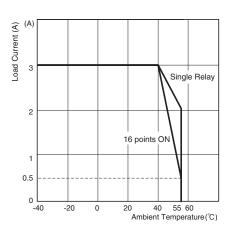


Inrush Current Resistance: Non-repetitive

The following graphs show the maximum inrush currents that can be withstood for non-repetitive operation. For repetitive operation, the figures should be reduced by half.

G3RV-202S DC24 G3RV-202SL DC24

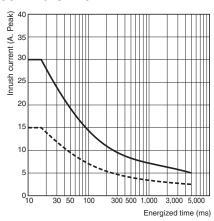


G3RV-D03 DC24

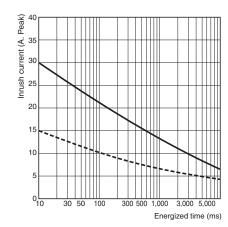

Internal Circuits

G70V-SID16P


(NPN input/- common)

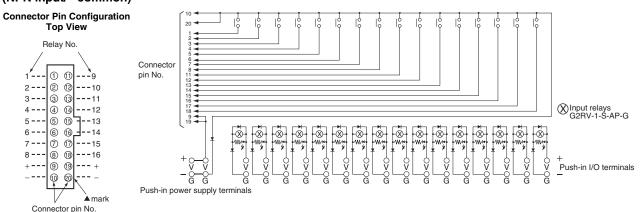

Note: Pin numbers are indicated for convenience. The ▲ mark can be used to determine orientation.

Terminal name	Description		
V (push-in power supply terminals)	Unit power supply terminals (24 VDC)		
G (push-in power supply terminals)	Onlit power supply terminals (24 VDC)		
V (push-in I/O terminals)	Relay-drive coil terminals (24 VDC)		
G (push-in I/O terminals)	helay-drive con terminals (24 VDC)		


G70V-SID16P-1 (PNP input/+ common)

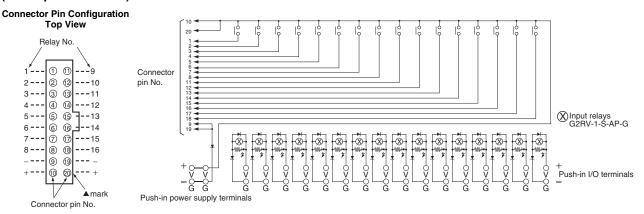

Note: Pin numbers are indicated for convenience. The ▲ mark can be used to determine orientation.

Terminal name	Description		
V (push-in power supply terminals)	Unit power supply terminals (24 VDC)		
G (push-in power supply terminals)	offit power supply terminals (24 VDO)		
V (push-in I/O terminals)	Relay-drive coil terminals (24 VDC)		
G (push-in I/O terminals)	helay-drive con terminals (24 VDO)		


G70V-SID16P-C16 (NPN input/– common)

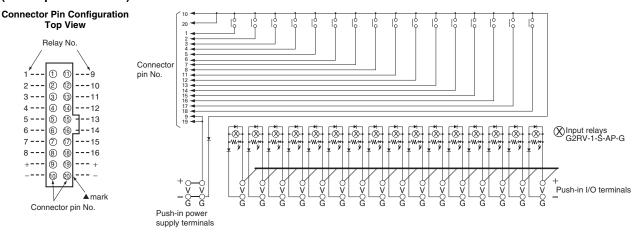

Note: Pin numbers are indicated for convenience. The ▲ mark can be used to determine orientation.

Terminal name	Description		
V (push-in power supply terminals)	Unit power supply terminals (24 VDC)		
G (push-in power supply terminals)	onit power supply terminals (24 VDO)		
V (push-in I/O terminals)	Relay-drive coil terminals (24 VDC)		
G (push-in I/O terminals)	Helay-drive con terminals (24 VDC)		

G70V-SID16P-1-C16 (PNP input/+ common)

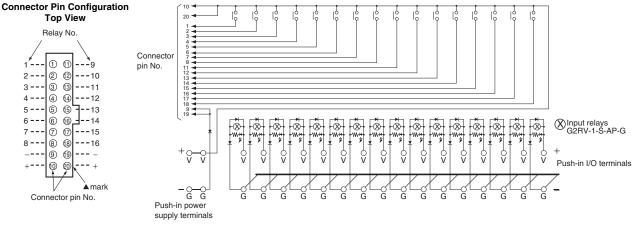


Note: Pin numbers are indicated for convenience. The ▲ mark can be used to determine orientation.

Terminal name	Description		
V (push-in power supply terminals)	Unit power supply terminals (24 VDC)		
G (push-in power supply terminals)	Offit power supply terminals (24 VDO)		
V (push-in I/O terminals)	Relay-drive coil terminals (24 VDC)		
G (push-in I/O terminals)	Helay-unive con terminals (24 VDO)		

G70V-SOC16P

(NPN output/+ common)

Note: A controller with an NPN transistor, common output can be connected to the G70V-SOC16P.

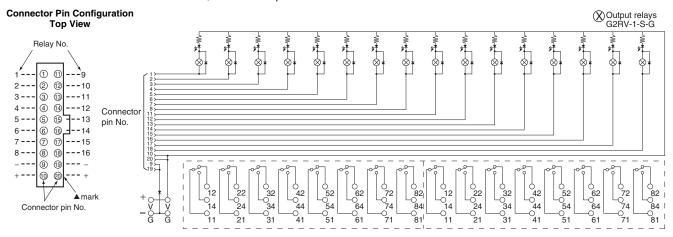


Note: Pin numbers are indicated for convenience. The ▲ mark can be used to determine orientation.

Terminal name	Description	
V (push-in power supply terminals)	Unit power supply terminals (24 VDC)	
G (push-in power supply terminals)	Offit power supply terminals (24 VDO)	
11 to 81 (push-in I/O terminal common terminals)		
12 to 82 (push-in I/O terminal NC terminals)	Relay contact terminals	
14 to 84 (push-in I/O terminal NO terminals)		

G70V-SOC16P-1

(PNP output/- common)

Note: A controller with a PNP transistor, + common output can be connected to the G70V-SOC16P-1.

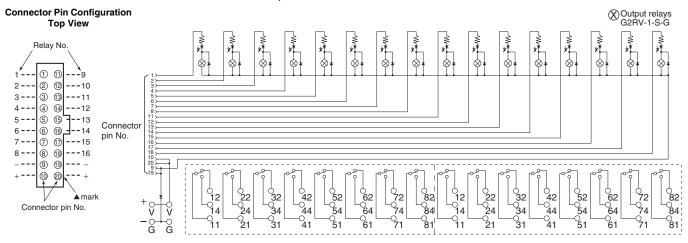


Note: Pin numbers are indicated for convenience. The ▲ mark can be used to determine orientation.

Terminal name	Description
V (push-in power supply terminals)	Unit power supply terminals (24 VDC)
G (push-in power supply terminals)	offit power supply terminals (24 VDO)
11 to 81 (push-in I/O terminal common terminals)	
12 to 82 (push-in I/O terminal NC terminals)	Relay contact terminals
14 to 84 (push-in I/O terminal NO terminals)	

G70V-SOC16P-C4

(NPN output/+ common)

Note: A controller with an NPN transistor, common output can be connected to the G70V-SOC16P-C4.

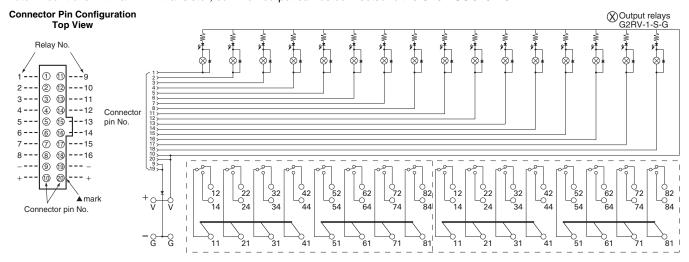


Note: Pin numbers are indicated for convenience. The ▲ mark can be used to determine orientation.

Terminal name	Description	
V (push-in power supply terminals)	Unit power supply terminals (24 VDC)	
G (push-in power supply terminals)	of the power supply terminals (24 VDO)	
11 to 81 (push-in I/O terminal common terminals)		
12 to 82 (push-in I/O terminal NC terminals)	Relay contact terminals	
14 to 84 (push-in I/O terminal NO terminals)		

G70V-SOC16P-1-C4

(PNP output/- common)

Note: A controller with a PNP transistor, + common output can be connected to the G70V-SOC16P-1-C4.

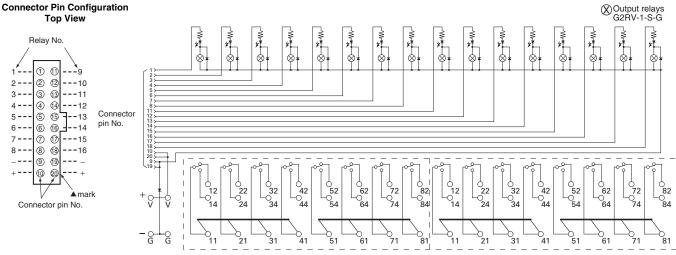


Note: Pin numbers are indicated for convenience. The ▲ mark can be used to determine orientation.

Terminal name	Description	
V (push-in power supply terminals)	Unit power supply terminals (24 VDC)	
G (push-in power supply terminals)	Offic power supply terminals (24 VDO)	
11 to 81 (push-in I/O terminal common terminals)		
12 to 82 (push-in I/O terminal NC terminals)	Relay contact terminals	
14 to 84 (push-in I/O terminal NO terminals)		

G70V-ZOM16P-1-C4-D

(PNP output/- common)

Note: A controller with an PNP transistor, common output can be connected to the G70V-ZOM16P-1-C4-D.

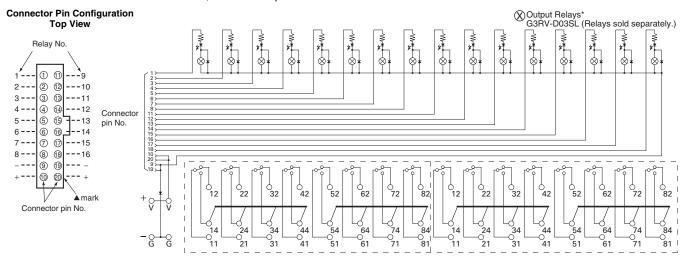

Note: Pin numbers are indicated for convenience. The ▲ mark can be used to determine orientation.


Terminal name	Description			
V (push-in power supply terminals)	Unit power supply terminals (24 VDC)			
G (push-in power supply terminals)				
11 to 81 (push-in I/O terminal SSR output terminal +)				
12 to 82 (push-in I/O terminal Open terminal)	SSR contact terminals			
14 to 84 (push-in I/O terminal SSR output terminal -)				


^{*}The G70V-ZOM16P-1-C4-D does not come with SSRs. Use Slim I/O SSRs (for DC: G3RV-D03SL).

Dimensions (Unit: mm)

I/O Relay Terminals and I/O Terminal Sockets

For Inputs
G70V-SID16P
G70V-SID16P-1
G70V-ZID16P
G70V-ZID16P-1
G70V-SID16P-C16
G70V-SID16P-1-C16
G70V-ZID16P-C16
G70V-ZID16P-C16

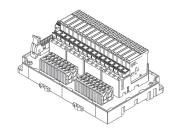


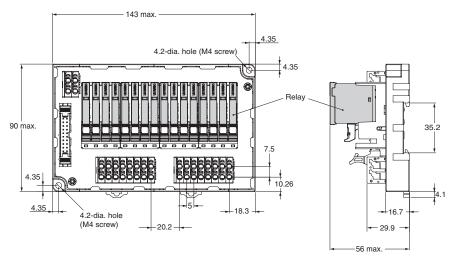


Note: 1. Relays are not mounted to the G70V-ZID16P(-1)(-C16) I/O Terminal Sockets. The dimensions are for when Relays are not mounted.

2. Specified mounting torque: 0.59 to 0.98 N·m.

For Outputs G70V-SOC16P G70V-SOC16P-1 G70V-ZOM16P G70V-ZOM16P-1 G70V-SOC16P-C4 G70V-SOC16P-1-C4 G70V-ZOM16P-1-C4 G70V-ZOM16P-1-C4-D

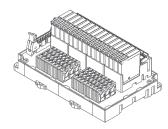

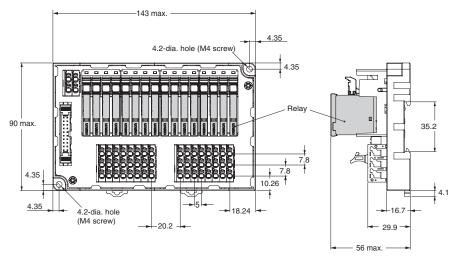


Note: 1. Relays are not mounted to the G70V-ZOM16P(-1)(-C4)(-D) I/O Terminal Sockets. The dimensions are for when Relays are not mounted.

2. Specified mounting torque: 0.59 to 0.98 N·m.

Terminal Arrangement/Internal Connection

For Inputs G70V-SID16P G70V-SID16P-1

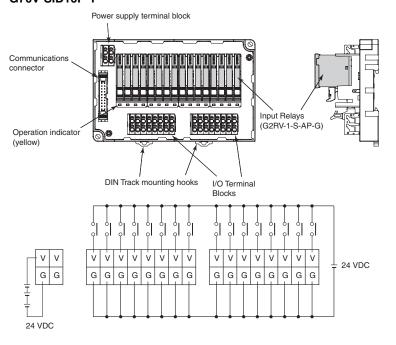


 Supply a power supply that meets the voltage specifications for both the Relays and I/O Relay Terminal to the V and G terminals.

Make sure that the polarity is correct.

The V terminals are positive and the G terminals are negative.

 Supply the rated voltage (24 VDC) of the Controller's input circuit to the power supply input terminals (V and G). Use a power supply with low noise.

For Outputs G70V-SOC16P G70V-SOC16P-1

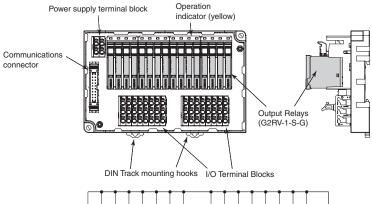


 Supply a power supply that meets the voltage specifications for both the Relays and I/O Relay Terminal to the V and G terminals.

Make sure that the polarity is correct.

The V terminals are positive and the G terminals are negative.


- The terminals (11 to 81, 12 to 82, and 14 to 84) are contact outputs. Supply a suitable power supply for the loads.
- The power supply input terminals (V and G) supply power to both drive the Relays and to operate the Controller's output transistors

Align the voltage specifications of the Controller and the I/O Relay Terminal.

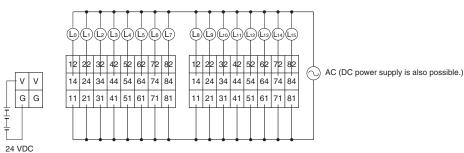


For Inputs

G70V-SID16P-C16 G70V-SID16P-1-C16

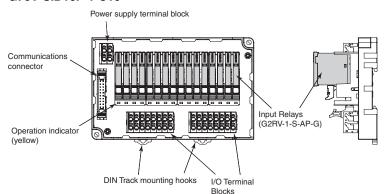


- Supply a power supply that meets the voltage specifications for both the Relays and I/O Relay Terminal to the V and G terminals.
 - Make sure that the polarity is correct.
 - The V terminals are positive and the G terminals are negative.
- Supply the rated voltage (24 VDC) of the Controller's input circuit to the power supply input terminals (V and G). Use a power supply with low noise.


G70V-SID16P-C16

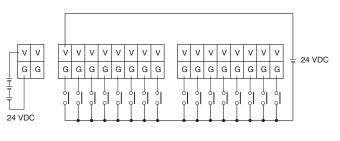

G70V-SID16P-1-C16

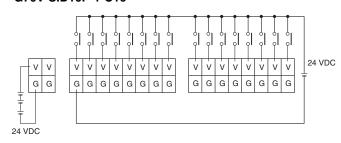

For Outputs G70V-SOC16P-C4 G70V-SOC16P-1-C4

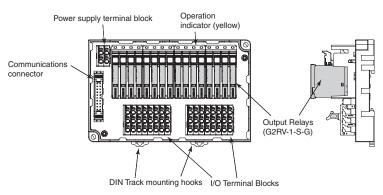


 Supply a power supply that meets the voltage specifications for both the Relays and I/O Relay Terminal to the V and G terminals.


Make sure that the polarity is correct.

The V terminals are positive and the G terminals are negative.

- The terminals (11 to 81, 12 to 82, and 14 to 84) are contact outputs. Supply a suitable power supply for the loads.
- The power supply input terminals (V and G) supply power to both drive the Relays and to operate the Controller's output transistors

 
Align the voltage specifications of the Controller and the I/O Relay Terminal.



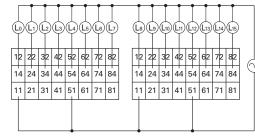

AC (DC power supply is also possible.)

For Outputs G70V-ZOM16P-1-C4-D

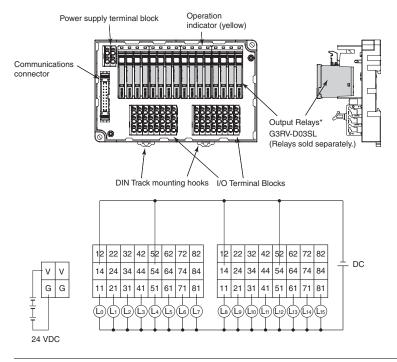

 Supply a power supply that meets the voltage specifications for both the Relays and I/O Relay Terminal to the V and G terminals.

Make sure that the polarity is correct.

The V terminals are positive and the G terminals are negative.

- The terminals (11 to 81 and 14 to 84) are contact outputs.
 Supply a suitable power supply for the loads. Make sure that polarity of the output terminal is correct.
- The power supply input terminals (V and G) supply power to both drive the Relays and to operate the Controller's output transistors.

Align the voltage specifications of the Controller and the I/O Relay Terminal.

* The G70V-ZOM16P-1-C4-D does not come with SSRs. Use Slim I/O SSRs (for DC: G3RV-D03SL).

Safety Precautions

Be sure to read *The Safety Precautions for All I/O Relay Terminals* in the website at the following URL: http://www.ia.omron.com/.

Warning Indications

Precautions for Safe Use	Supplementary comments on what to do or avoid doing, to use the product safely.
Precautions for Correct Use	Supplementary comments on what to do or avoid doing, to prevent failure to operate, malfunction, or undesirable effects on product performance.

Precautions for Safe Use

Transportation

- Do not transport the I/O Relay Terminal under the following locations. Doing so may occasionally result in damage, malfunction, or deterioration of performance characteristics.
 - · Locations subject to water or oil
 - · Locations subject to high temperature or high humidity
 - Locations subject to condensation due to rapid changes in temperature

Operating and Storage Environments

- Do not use or store the I/O Relay Terminal in the following locations. Doing so may result in damage, malfunction, or deterioration of performance characteristics.
 - · Locations subject to rainwater or water splashes
 - Locations subject to exposure to water, oil, or chemicals
 - · Locations subject to high temperature or high humidity
 - Locations subject to ambient storage temperatures outside the range –40 to 65°C
 - Locations subject to ambient operating temperatures outside the range –40 to 55°C
 - Locations subject to relative humidity outside the range 35% to 85% or locations in which condensation may occur due to rapid changes in temperature
 - · Locations subject to corrosive gases or inflammable gases
 - Locations subject to dust, salts, or iron, or locations where there is salt damage
 - · Locations subject to direct sunlight
 - · Locations subject to shock or vibration

Installation and Mounting

- Mount the I/O Relay Terminal in the specified direction. Otherwise excessive heat generated by the I/O Relay Terminal may occasionally cause burning.
- Mount the I/O Relay Terminal firmly to a DIN Track. Otherwise, the I/O Relay Terminal may fall off.
- Do not handle the I/O Relay Terminal with oily or dusty (especially iron dust) hands.
- Make sure that there is no excessive ambient temperature rise due to the heat generation of the I/O Relay Terminal. If the I/O Relay Terminal is mounted inside a panel, install a fan so that the interior of the panel is fully ventilated.

Installation and Wiring

- Use wires that are suited to the load current and voltage.
 Otherwise, excessive heat generated by the wires may cause burning or may cause the wire covering to melt, possibly leading to electric shock.
- Do not use wires with a damaged outer covering. Otherwise, it may result in electric shock or ground leakage.
- Do not wire any wiring in the same duct or conduit as power or high-tension lines. Otherwise, inductive noise may damage the I/O Relay Terminal or cause it to malfunction.
- Do not apply a voltage or current that exceeds the rating to any terminal. Doing so may result in failure or burning.

Push-In Plus Terminal Blocks

- Do not wire anything to the release holes.
- Do not tilt or twist a flat-blade screwdriver while it is inserted into a release hole on the terminal block. The terminal block may be damaged.
- Insert a flat-blade screwdriver into the release holes at an angle.
 The terminal block may be damaged if you insert the screwdriver straight in.
- Do not allow the flat-blade screwdriver to fall out while it is inserted into a release hole.
- Do not bend a wire past its natural bending radius or pull on it with excessive force. Doing so may cause the wire disconnection.
- Do not insert more than one wire into each terminal insertion hole.
- To prevent wire materials from smoking or igniting, confirm wire ratings and use the wiring materials given in the following table.

Recommended wire gauge	Stripping length (Ferrules not used)
0.25 to 1.5mm ² /AWG24 to 16	8 mm

• Refer to the following table for wire sizes for external I/O devices according to the current flow.

AWG24 to AWG20	Maximum current flow: 6 A
AWG18 to AWG16	Maximum current flow: 10 A

Application

 
- Select a load within the rated values. Not doing so may result in malfunction, failure, or burning.
- The I/O Relay Terminal may occasionally rupture if short-circuit current flows. As protection against accidents due to shortcircuiting, be sure to install protective devices, such as fuses and no-fuse breakers, on the power supply side.
- Use a power supply within the rated frequencies. Otherwise, malfunction, failure, or burning may occasionally occur.
- Minor electric shock may occasionally occur. Always turn OFF the power supply before performing wiring.

Precautions for Correct Use

- Do not drop the I/O Relay Terminal or subject it to abnormal vibration or shock during transportation or mounting. Doing so may result in deterioration of performance, malfunction, or failure.
- Do not transport an I/O Relay Terminal when it is not packaged.
 Damage or failure may occur.
- · Use a power supply with low noise.


Push-In Plus Terminal Blocks

1. Connecting Wires to the Push-In Plus Terminal Block Part Names of the Terminal Block



Connecting Wires with Ferrules and Solid Wires

 Insert the solid wire or ferrule straight into the terminal block until the end strikes the terminal block.





 If a wire is difficult to connect because it is too thin, use a flat-blade screwdriver in the same way as when connecting stranded wire.

Connecting Stranded Wires

Use the following procedure to connect the wires to the terminal block.

  - Hold a flat-blade screwdriver at an angle and insert it into the
 - The angle should be between 10° and 15°. If the flat-blade screwdriver is inserted correctly, you will feel the spring in the release hole.
- 2. With the flat-blade screwdriver still inserted into the release hole, insert the wire into the terminal hole until it strikes the terminal block
- 3. Remove the flat-blade screwdriver from the release hole.






Checking Connections


- After the insertion, pull gently on the wire to make sure that it will not come off and the wire is securely fastened to the terminal block.
- If you use a ferrule with a conductor length of 10 mm, part of the conductor may be visible after the ferrule is inserted into the terminal block, but the product insulation distance will still be satisfied.

2. Removing Wires from the Push-In Plus Terminal Block

Use the following procedure to remove wires from the terminal block. The same method is used to remove stranded wires, solid wires, and ferrules.

  - Hold a flat-blade screwdriver at an angle and insert it into the release hole.
- With the flat-blade screwdriver still inserted into the release hole, remove the wire from the terminal insertion hole.
- 3. Remove the flat-blade screwdriver from the release hole.






3. Recommended Ferrules and Crimp Tools Recommended ferrules

Applicable wire		Ferrule Stripping length		Recommended ferrules				
(mm²)	(AWG)	length (mm)	[mm] (Ferrules used)	Phoenix Contact product	Weidmuller product	Wago product		
0.25	24	8	10	AI0,25-8	H0.25/12	FE-0.25-8N-YE		
0.25	24	10	12	AI0,25-10				
0.34	22	8	10	AI0,34-8	H0.34/12	FE-0.34-8N-TQ		
0.54	22	10	12	AI0,34-10				
0.5	20	8	10	AI0,5-8	H0.5/14	FE-0.5-8N-WH		
0.5		10	12	AI0,5-10	H0.5/16	FE-0.5-10N-WH		
0.75	18	8	10	AI0,75-8	H0.75/14	FE-0.75-8N-GY		
0.75		10	12	AI0,75-10	H0.75/16	FE-0.75-10N-GY		
1/1.25	18/17	8	10	AI1-8	H1.0/14	FE-1.0-8N-RD		
1/1.23	10/17	10	12	AI1-10	H1.0/16	FE-1.0-10N-RD		
1.25/1.5	5 17/16	8	10	AI1,5-8	H1.5/14	FE-1.5-8N-BK		
1.23/1.3	17/10	10	12	AI1,5-10	H1.5/16	FE-1.5-10N-BK		
Recommended crimp tool			CRIMPFOX6 CRIMPFOX6T-F CRIMPFOX10S	PZ6 roto	Variocrimp4			

 
- Note: 1. Make sure that the outer diameter of the wire coating is smaller than the inner diameter of the insulation sleeve of the recommended ferrule.
 - 2. Make sure that the ferrule processing dimensions conform to the following figures.



Recommended Flat-blade Screwdriver

Use a flat-blade screwdriver to connect and remove wires. Use the following flat-blade screwdriver.

 The following table shows manufacturers and models as of 2015/Dec.



Model	Manufacturer
ESD0.40×2.5	Wera
SZS 0.4×2.5 SZF 0-0.4×2.5 *	Phoenix Contact
0.4×2.5×75 302	Wiha
AEF.2.5×75	Facom
210-719	Wago
SDI 0.4×2.5×75	Weidmuller

*OMRON's exclusive purchase model XW4Z-00B is available to order as SZF 0-0.4 × 2.5 (manufactured by Phoenix Contact).

Connecting Cables

Refer to the datasheet for the **XW2Z-R** Cables for I/O Relay Terminals

Туре	Name	I/O Classification	Appearance	Cable length L (mm)		L (mm)	Models	
	Cables with Loose Wires	16 I/O points	A side B side Device end I/O Relay Terminal 300	1,000			XW2Z-RY100C	
				1,500			XW2Z-RY150C	
	and Crimp Terminals			2,000			XW2Z-RY200C	
	XW2Z-RY□C			3,000			XW2Z-RY300C	
Various devices				5,000			XW2Z-RY500C	
	Cables with Loose Wires	16 I/O points		2,000			XW2Z-RA200C	
	XW2Z-RA□C	To 1/O points	300		5,000		XW2Z-RA500C	
					1,000		XW2Z-R100C	
	Cables with Connectors				1,500		XW2Z-R150C	
Fujitsu connectors (24 pins)	(1:1)	16 I/O points			2,000		XW2Z-R200C	
	XW2Z-R□C				3,000		XW2Z-R300C	
			L		5,000		XW2Z-R500C	
				(A) 1,00	0	(B) 750	XW2Z-RI100C-75	
				(A) 1,50	0 (I	3) 1,250	XW2Z-RI150C-125	
	Cables with Connectors (1:2) XW2Z-RI□C-□ XW2Z-RO□C-□	32 input points	(A)	(A) 2,00	0 (I	3) 1,750	XW2Z-RI200C-175	
				(A) 3,00	0 (I	3) 2,750	XW2Z-RI300C-275	
			(120)	(A) 5,00	0 (I	B) 4,750	XW2Z-RI500C-475	
Fujitsu connectors (40 pins)				(A) 1,00	0	(B) 750	XW2Z-RO100C-75	
				(A) 1,50	0 (I	B) 1,250	XW2Z-RO150C-125	
		32 output points	(B)	(A) 2,00	0 (I	3) 1,750	XW2Z-RO200C-175	
			Straight length (without bends)	(A) 3,00	0 (I	3) 2,750	XW2Z-RO300C-275	
				(A) 5,00	0 (I	B) 4,750	XW2Z-RO500C-475	
	Cables with Connectors (1:3) 48 I/O I	48 I/O points		(A) ————————————————————————————————————		(B) 1,250	(C) 1,000	XW2Z-R150C-125-100
Fujitsu connectors (56 pins) MIL connectors (20 pins)			(120)		(B) 1,750	(C) 1,500	XW2Z-R200C-175-150	
			Straight length (without bends)		(B) 2,750	(C) 2,500	XW2Z-R300C-275-250	
	Cables with Connectors (1:1) XW2Z-RI□C XW2Z-RO□C	16 I/O points	L L	250			XW2Z-RI25C	
				500			XW2Z-RI50C	
				250			XW2Z-RO25C	
				500			XW2Z-RO50C	

Туре	Name	I/O Classification	Appearance	Cable lene	gth L (mm)	Models
				(A) 500	(B) 250	XW2Z-RO50-25-D1
				(A) 750	(B) 500	XW2Z-RO75-50-D1
				(A) 1,000	(B) 750	XW2Z-RO100-75-D1
				(A) 1,500	(B) 1,250	XW2Z-RO150-125-D1
				(A) 2,000	(B) 1,750	XW2Z-RO200-175-D1
				(A) 3,000	(B) 2,750	XW2Z-RO300-275-D1
				(A) 5,000	(B) 4,750	XW2Z-RO500-475-D1
		32 I/O points		(A) 500	(B) 250	XW2Z-RI50-25-D1
		32 I/O points		(A) 750	(B) 500	XW2Z-RI75-50-D1
			A side B side Device end I/O Relay Terminal	(A) 1,000	(B) 750	XW2Z-RI100-75-D1
	Cables with Connectors (1:2)		(A)	(A) 1,500	(B) 1,250	XW2Z-RI150-125-D1
				(A) 2,000	(B) 1,750	XW2Z-RI200-175-D1
MIL connectors (40 pins)	XW2Z-RO□-□-D1, XW2Z-RI□-□-D1,			(A) 3,000	(B) 2,750	XW2Z-RI300-275-D1
	XW2Z-RI□-□-D2, XW2Z-RM□-□-D1*,		(120)	(A) 5,000	(B) 4,750	XW2Z-RI500-475-D1
	XW2Z-RM□-□-D1*			(A) 500	(B) 250	XW2Z-RI50-25-D2
			Straight length (without bends)	(A) 750	(B) 500	XW2Z-RI75-50-D2
			Ottaight length (without bends)	(A) 500	(B) 250	XW2Z-RM50-25-D1
				(A) 750	(B) 500	XW2Z-RM75-50-D1
				(A) 1,000	(B) 750	XW2Z-RM100-75-D1
		16 inputs and		(A) 1,500	(B) 1,250	XW2Z-RM150-125-D1
		16 outputs (32 I/O points)		(A) 2,000	(B) 1,750	XW2Z-RM200-175-D1
		(32 I/O points)		(A) 3,000	(B) 2,750	XW2Z-RM300-275-D1
				(A) 5,000	(B) 4,750	XW2Z-RM500-475-D1
				(A) 500	(B) 250	XW2Z-RM50-25-D2
				(A) 750	(B) 500	XW2Z-RM75-50-D2
				(A) 1,000	(B) 750	XW2Z-RI100C-75-MN
Mitsubishi Electric PLCs with		32 input points	(A) (120)	(A) 1,500	(B) 1,250	XW2Z-RI150C-125-MN
32-point connectors (1:2)	Mitsubishi Electric PLC	oz input pointo		(A) 2,000	(B) 1,750	XW2Z-RI200C-175-MN
Applicable models:	Connecting Cables			(A) 3,000	(B) 2,750	XW2Z-RI300C-275-MN
For inputs: AX42, A1SX41, A1SX42, QX41, and QX42	XW2Z-RI□C-□-MN			(A) 1,000	(B) 750	XW2Z-RO100C-75-MN
For outputs: AY42, A1SY41, A1SY42, QY41P, and	XW2Z-RO□C-□-MN			(A) 1,500	(B) 1,250	XW2Z-RO150C-125-MN
QY42P		32 output points	← (B) → Straight length (without bends)	(A) 2,000	(B) 1,750	XW2Z-RO200C-175-MN
				(A) 3,000	(B) 2,750	XW2Z-RO300C-275-MN
					00	XW2Z-R050C-SCH-A
			(A)	1,000		XW2Z-R100C-SCH-A
Ochocides Electric DI Occide		32 input points		2,000		XW2Z-R200C-SCH-A
Schneider Electric PLCs with 32-point connectors (1:2)				3,000		XW2Z-R300C-SCH-A
Applicable models:				5,000		XW2Z-R500C-SCH-A
For inputs:			(120)	500		XW2Z-R050C-SCH-B
140 DDI 353 00 For outputs:					000	XW2Z-R100C-SCH-B
140 DDO 353 00		32 output points	(B) ——		000	XW2Z-R200C-SCH-B
		, , , , ,	Straight length (without bends)		000	XW2Z-R300C-SCH-B
	Schneider Electric PLC Connecting Cables			5,000		XW2Z-R500C-SCH-B
	1				00	XW2Z-R050C-SCH-C
	XW2Z-R□C-SCH-□			1,000		XW2Z-R100C-SCH-C
Schneider Electric PLCs with		16 input points		2,0	000	XW2Z-R200C-SCH-C
16-point connectors (1:1)				3,0	000	XW2Z-R300C-SCH-C
Applicable models:				5,000		XW2Z-R500C-SCH-C
For inputs:		16 output points		500		XW2Z-R050C-SCH-D
BMX DDI 1602 For outputs:				1,000		XW2Z-R100C-SCH-D
BMX DDO 1602	to accompate a love avaduat			2,000		XW2Z-R200C-SCH-D
					000	XW2Z-R300C-SCH-D
					000	XW2Z-R500C-SCH-D
				·		1

^{*}These cables are used to connect to slave products for DeviceNet and other networks.

Туре	Name	I/O Classification	Appearance	Cable length L (mm)	Models	
				500	XW2Z-R050C-SIM-A	
			A side B side	1,000	XW2Z-R100C-SIM-A	
Siemens PLCs with		32 input points	Device end I/O Relay Terminal	2,000	XW2Z-R200C-SIM-A	
32-point connectors (1:2)			(A)	3,000	XW2Z-R300C-SIM-A	
Applicable models:				5,000	XW2Z-R500C-SIM-A	
For inputs: 6ES7 321-1BL00-0AA0				500	XW2Z-R050C-SIM-B	
For outputs:			(120)	1,000	XW2Z-R100C-SIM-B	
6ES7 322-1BL00-0AA0		32 output points	(B)	2,000	XW2Z-R200C-SIM-B	
			Straight length (without bends)	3,000	XW2Z-R300C-SIM-B	
		5,000	5,000	XW2Z-R500C-SIM-B		
Siemens PLCs with	Siemens PLC Connecting Cables				500	XW2Z-R050C-SIM-C
16-point connectors (1:1)		16 input points	п л	1,000	XW2Z-R100C-SIM-C	
Applicable models:			16 input points 2,000		2,000	XW2Z-R200C-SIM-C
For inputs:	XW2Z-R□C-SIM-□		L	3,000	XW2Z-R300C-SIM-C	
6ES7 321-1BH02-0AA0				5,000	XW2Z-R500C-SIM-C	
	1			500	XW2Z-R050C-SIM-D	
				1,000	XW2Z-R100C-SIM-D	
Siemens PLCs with		32 input points	(A)	2,000 3,000	XW2Z-R200C-SIM-D	
32-point connectors (1:2)					XW2Z-R300C-SIM-D	
Applicable models:					5,000	XW2Z-R500C-SIM-D
For inputs: 6ES7 421-1BL-0AA0 For outputs: 6ES7 422-1BL-0AA0			(120)	500	XW2Z-R050C-SIM-E	
				1,000	XW2Z-R100C-SIM-E	
		32 output points	Straight length (without bends)	2,000	XW2Z-R200C-SIM-E	
			Straight long. (Willout bolldo)	3,000	XW2Z-R300C-SIM-E	
				5,000	XW2Z-R500C-SIM-E	


Note: 1. Refer to Combinations of Connections starting on the next page.

2. For connector pin diagrams and cable colors, refer to the wiring diagrams starting on page 4 of XW2Z-R Cables for I/O Relay Terminals.

Combinations of Connections

Refer to Combinations of Connections (PLC I/O Units, NX Series, CJ Series, and CS Series) starting on the next page. For combinations with other products, refer to I/O Relay Terminals and Connected Devices (Cat. No. J217) or to the datasheets for related products.

Connection Patterns

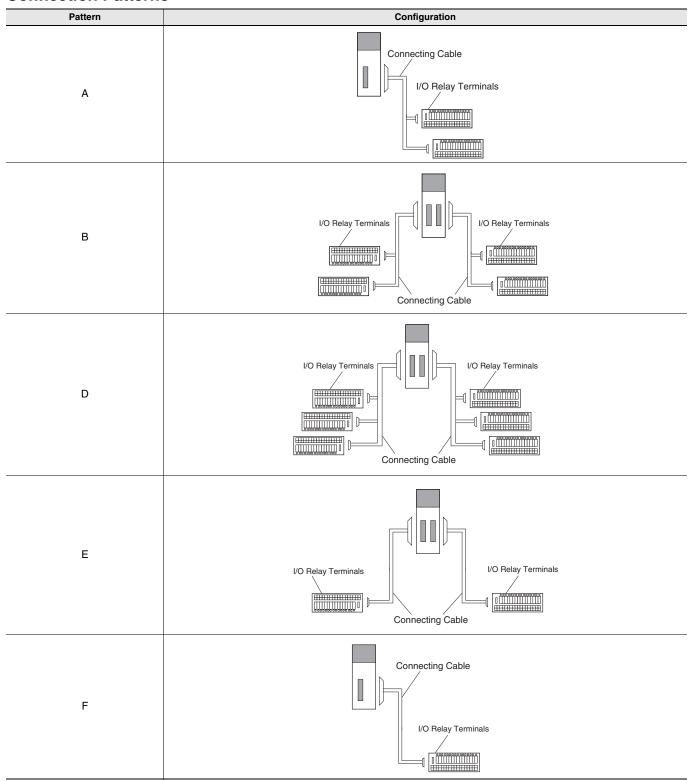

Combinations with NX Series

NX I/O Units			Conne	XW2Z-R Cables			G70V I/O Relay Terminals			
I/O capacity	Model	External connectors	Polarity	ction pattern	Specifications	Model *1	Quantity required	Specifications	Model	Quantity required
Input Unit	s						*			
16 inputs	NX-ID5142-5	1 MIL connector	NPN or PNP	F	1:1 for 16 inputs	XW2Z-RO□C	1		G70V-SID16P(-1)(-C16)	1
20 innute	NX-ID6142-5	1 MIL connector	NPN or PNP		1:2 for 32 inputs	XW2Z-RO□-□-D1	1	Inputs *2	G70V-SID16P(-1)(-C16)	2
32 inputs	NX-ID6142-6	1 Fujitsu connector	NPN or PNP	Α	1:2 for 32 inputs	XW2Z-RI□C-□	1		G70V-SID16P(-1)(-C16)	2
Output Un	its									
16	NX-OD5121-5	1 MIL connector	NPN	F	1:1 for 16 outputs	XW2Z-RO□C	1	NPN outputs	G70V-SOC16P(-C4)	1
outputs	NX-OD5256-5	1 MIL connector	PNP	F	1:1 for 16 outputs	XW2Z-RO□C	1	PNP outputs	G70V-SOC16P-1(-C4)	1
32	NX-OD6121-5	1 MIL connector	NPN	A	1:2 for 32 outputs	XW2Z-RO□-□-D1	1	NPN outputs	G70V-SOC16P(-C4)	2
outputs	NX-OD6256-5	1 MIL connector	PNP		1:2 for 32 outputs	XW2Z-RO□-□-D1	1	PNP outputs	G70V-SOC16P-1(-C4)	2
32 outputs	NX-OD6121-6	1 Fujitsu connector	NPN		1:2 for 32 outputs	XW2Z-RO□C-□	1	NPN outputs	G70V-SOC16P(-C4)	2
Mixed I/O	Units		l .		L			l	1	
		2 Fujitsu connectors	Outputs:		1:1 for			Inputs *2	G70V-SID16P(-1)(-C16)	1
	NX-MD6121-6	(1 for 16 inputs and 1 for 16 outputs)	NPN Inputs: NPN or PNP		16 inputs or outputs	XW2Z-R□C	2	NPN outputs	G70V-SOC16P(-C4)	1
16 inputs	NX-MD6121-5 (2 MIL connectors (1 for 16 inputs and 1 for 16 outputs)	Outputs: NPN Inputs: NPN or PNP		1:1 for 16 inputs	XW2Z-RO□C	1	Inputs *2	G70V-SID16P(-1)(-C16)	1
and 16 outputs				E	1:1 for 16 outputs	XW2Z-RO□C	1	NPN outputs	G70V-SOC16P(-C4)	1
	NX-MD6256-5	2 MIL connectors 5 (1 for 16 inputs and 1 for 16 outputs)	Outputs: PNP Inputs: NPN or PNP		1:1 for 16 inputs	XW2Z-RO□C	1	Inputs *2	G70V-SID16P(-1)(-C16)	1
					1:1 for 16 outputs	XW2Z-RI□C	1	PNP outputs	G70V-SOC16P-1(-C4)	1

^{*1.} The box □ is replaced by the cable length. ***2.** Either NPN inputs or PNP inputs can be used.

Combinations with CJ Series

CJ1W I/O Units				Conne	2	(W2Z-R Cables		G70V I/O Relay Terminals		
I/O capacity	Model	External connectors	Polarity	ction pattern	Specifications	Model *1	Quantity required	Specifications	Model	Quantity required
DC Input U	Jnits		,							
	CJ1W-ID231	1 Fujitsu connector	NPN		1:2 for 32 inputs	XW2Z-RI□C-□	1			2
32 inputs	CJ1W-ID232	1 MIL connector	NPN	Α	1:2 for 32 inputs	XW2Z-RO□-□-D1	1		G70V-SID16P(-1)(-C16)	
	CJ1W-ID233	1 MIL connector	NPN		1:2 for 32 inputs	XW2Z-RO□-□-D1	1	Inputs *2		
C4 immute	CJ1W-ID261	2 Fujitsu connectors (2, 32-point connectors)	NPN	В	1:2 for 32 inputs	XW2Z-RI□C-□	1		C70V CID4CD(1)/ C4C)	4
64 inputs	CJ1W-ID262	2 MIL connectors (2, 32-point connectors)	NPN	В	1:2 for 32 inputs	XW2Z-RO□-□-D1	1	-	G70V-SID16P(-1)(-C16)	4
Transistor	Output Units									
	CJ1W-OD231	1 Fujitsu connector	Sinking (NPN)		1:2 for 32 outputs	XW2Z-RO□C-□	1	NPN outputs	G70V-SOC16P(-C4)	2
32	CJ1W-OD233	1 MIL connector	Sinking (NPN)	A	1:2 for 32 outputs	XW2Z-RO□-□-D1	1	NEW Outputs	G70V-30C10F(-C4)	2
outputs	CJ1W-OD232	1 MIL connector	Sourcing (PNP)	A	1:2 for 32 outputs	XW2Z-RO□-□-D1	1	PNP outputs	G70V-SOC16P-1(-C4)	2
	CJ1W-OD234	1 MIL connector	Sinking (NPN)		1:2 for 32 outputs	XW2Z-RO□-□-D1	1	NPN outputs	G70V-SOC16P(-C4)	2
	CJ1W-OD261	2 Fujitsu connectors (2, 32-point connectors)	Sinking (NPN)	В	1:2 for 32 outputs	XW2Z-RO□C-□	2	NPN outputs	G70V-SOC16P(-C4)	4
64 outputs	CJ1W-OD262	2 MIL connectors (2, 32-point connectors)	Sourcing (PNP)		1:2 for 32 outputs	XW2Z-RO□-□-D1	2	PNP outputs	G70V-SOC16P-1(-C4)	4
	CJ1W-OD263	2 MIL connectors (2, 32-point connectors)	Sinking (NPN)		1:2 for 32 outputs	XW2Z-RO□-□-D1	2	NPN outputs	G70V-SOC16P(-C4)	4
DC Input/1	Transistor Outp	ut Units								
	CJ1W-MD231	2 Fujitsu connectors (1 for 16 inputs and	Sinking (NPN)		1:1 for 16 inputs or	XW2Z-R□C	2	Inputs *2	G70V-SID16P(-1)(-C16)	1
		1 for 16 outputs)	(,		outputs 1:1 for	XW2Z-RO□C	1	NPN outputs	G70V-SOC16P(-C4) G70V-SID16P(-1)(-C16)	1
16 inputs and 16	CJ1W-MD233	2 MIL connectors (1 for 16 inputs and 1 for 16 outputs)	Sinking (NPN)		16 inputs 1:1 for	XW2Z-RO□C	1	NPN outputs	G70V-SOC16P(-C4)	1
outputs		O MIL		-	16 outputs 1:1 for	XW2Z-RO□C	1	Inputs *2	G70V-SID16P(-1)(-C16)	1
	CJ1W-MD232	2 MIL connectors (1 for 16 inputs and 1 for 16 outputs)	Sourcing (PNP)		16 inputs 1:1 for	XW2Z-RI□C	1	PNP outputs	G70V-SOC16P-1(-C4)	1
		. ,			16 outputs	77722 11110	'	. I vi Outputs	3.04 000101 -1(-04)	'
	CJ1W-MD261	2 Fujitsu connectors (1 for 32 inputs and 1 for 32 outputs)	Sinking (NPN)		1:2 for 16 inputs	XW2Z-RI□C-□	1	Inputs *2	G70V-SID16P(-1)(-C16)	2
32 inputs and 32				В	1:2 for 16 outputs	XW2Z-RO□C-□	1	NPN outputs	G70V-SOC16P(-C4)	2
outputs	CJ1W-MD263	2 MIL connectors (1 for 32 inputs and	Sinking (NPN)		1:2 for 32 inputs	XW2Z-RO□-□-D1	1	Inputs *2	G70V-SID16P(-1)(-C16)	2
		1 for 32 outputs)			1:2 for 32 outputs	XW2Z-RO□-□-D1	1	NPN outputs	G70V-SOC16P(-C4)	2

^{*1.} The box ☐ is replaced by the cable length.
*2. Either NPN inputs or PNP inputs can be used.

Combinations with CS Series

CJ1W I/O Units			Conne	XW2Z-R Cables			G70V I/O Relay Terminals			
I/O capacity	Model	External connectors	Polarity	ction pattern	Specifications	Model *1	Quantity required	Specifications	Model	Quantity required
DC Input l	Jnits					+				
32 inputs	CS1W-ID231	1 Fujitsu connector	NPN	Α	1:2 for 32 inputs	XW2Z-RI□C-□	1		G70V-SID16P(-1)(-C16)	2
64 inputs	CS1W-ID261	2 Fujitsu connectors (2, 32-point connectors)	NPN	D 4	1:2 for 32 inputs	XW2Z-RI□C-□	2	Inputs *2	G70V-SID16P(-1)(-C16)	4
96 inputs	CS1W-ID291	2 Fujitsu connectors (2, 48-point connectors)	NPN		1:3 for 48 inputs or outputs	XW2Z-R□C-□-□	2		G70V-SID16P(-1)(-C16)	6
Transistor	Output Units			'						
32	CS1W-OD231 1 Fujitsu connector Sinking (NPN)	٨	1:2 for 32 outputs	XW2Z-RO□C-□	1	NPN outputs	G70V-SOC16P(-C4)	2		
outputs	CS1W-OD232	1 Fujitsu connector	Sourcing (PNP)		1:2 for 32 outputs	XW2Z-RO□C-□	1	PNP outputs	G70V-SOC16P-1(-C4)	2
64	CS1W-OD261	2 Fujitsu connectors (2, 32-point connectors)	Sinking (NPN)	В	1:2 for 32 outputs	XW2Z-RO□C-□	2	NPN outputs	G70V-SOC16P(-C4)	4
outputs	CS1W-OD262	2 Fujitsu connectors (2, 32-point connectors)	Sourcing (PNP)	Б	1:2 for 32 outputs	XW2Z-RO□C-□	2	PNP outputs	G70V-SOC16P-1(-C4)	4
96 outputs	CS1W-OD291	2 Fujitsu connectors (2, 48-point connectors)	Sinking (NPN)	D	1:3 for 48 inputs or outputs	XW2Z-R□C-□-□	2	NPN outputs	G70V-SOC16P(-C4)	6
DC Input/1	ransistor Outp	ut Units								
	CS1W-	2 Fujitsu connectors (1 for 32 inputs and 1 for 32 outputs)	Sinking (NPN)	В	1:2 for 32 inputs	XW2Z-RI□C-□	1	Inputs *2	G70V-SID16P(-1)(-C16)	2
32 inputs and 32	MD261				1:2 for 32 outputs	XW2Z-RO□C-□	1	NPN outputs	G70V-SOC16P(-C4)	2
outputs	CS1W-		Sourcing (PNP)		1:2 for 32 inputs	XW2Z-RI□C-□	1	Inputs *2	G70V-SID16P(-1)(-C16)	2
	MD262				1:2 for 32 outputs	XW2Z-RO□C-□	1	PNP outputs	G70V-SOC16P-1(-C4)	2
48 inputs	CS1W- MD291	2 Fujitsu connectors (1 for 48 inputs and 1 for 48 outputs)	Sinking (NPN)	- D	1:3 for	XW2Z-R□C-□-□	2	Inputs *2	G70V-SID16P(-1)(-C16)	3
					48 inputs or outputs	AVV2Z-NUU-U-U	۷.	NPN outputs	G70V-SOC16P(-C4)	3
outputs	CS1W-	2 Fujitsu connectors (1 for 48 inputs and 1 for 48 outputs)	Sourcing (PNP)		1:3 for	XW2Z-RC-U-U	1	Inputs *2	G70V-SID16P(-1)(-C16)	3
	MD292				48 inputs or outputs					

Refer to the manuals for the connected PLC for the connections to I/O Units for OMRON PLCs.

Series	Model	Man. No.	Manual Name
CS1	CS1G-CPU□□H, CS1H-CPU□□H	W339	Programmable Controllers Operation Manual
CJ1	CJ1H-CPU□□H-R, CJ1G/H-CPU□□H, CJ1G-CPU□□P, CJ1M-CPU□□, CJ1G-CPU□□	W393	CJ Series Programmable Controllers Operation Manual
CJ2	CJ2H-CPU6□-EIP, CJ2H-CPU6□, CJ2M-CPU□□	W472	CJ-series CJ2 CPU Unit Hardware User's Manual
NJ	NJ501-□□□	W500	NJ-series CPU Unit Hardware User's Manual
NX	NX-ID□□□□, NX-IA□□□□, NX-OD□□□□, NX-OC□□□□, NX-MD□□□□	W521	NX-series Digital I/O Units User's Manual

^{*1.} The box □ is replaced by the cable length. ***2.** Either NPN inputs or PNP inputs can be used.

MEMO	
MEMO	- MENO
	MEMO

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.



OMRON AUTOMATION AMERICAS HEADQUARTERS • Chicago, IL USA • 847.843.7900 • 800.556.6766 • www.omron247.com

OMRON CANADA, INC. • HEAD OFFICE

Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • www.omron247.com

OMRON ELECTRONICS DE MEXICO • HEAD OFFICE

México DF • 52.55.59.01.43.00 • 01-800-226-6766 • mela@omron.com

OMRON ELECTRONICS DE MEXICO • SALES OFFICE

Apodaca, N.L. • 52.81.11.56.99.20 • 01-800-226-6766 • mela@omron.com

OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE

São Paulo, SP, Brasil • 55.11.2101.6300 • www.omron.com.br

OMRON ARGENTINA • SALES OFFICE

Cono Sur • 54.11.4783.5300

OMRON CHILE • SALES OFFICE

Santiago • 56.9.9917.3920

OTHER OMRON LATIN AMERICA SALES

54.11.4783.5300

OMRON EUROPE B.V. • Wegalaan 67-69, NL-2132 JD, Hoofddorp, The Netherlands. • +31 (0) 23 568 13 00 • www.industrial.omron.eu

Authorized Distributor:

Controllers & I/O

- Machine Automation Controllers (MAC) Motion Controllers
- $\bullet \ Programmable \ Logic \ Controllers \ (PLC) \bullet Temperature \ Controllers \bullet Remote \ I/O$

Robotics

• Industrial Robots • Mobile Robots

Operator Interfaces

• Human Machine Interface (HMI)

Motion & Drives

- $\bullet \ \mathsf{Machine} \ \mathsf{Automation} \ \mathsf{Controllers} \ (\mathsf{MAC}) \ \bullet \ \mathsf{Motion} \ \mathsf{Controllers} \ \bullet \ \mathsf{Servo} \ \mathsf{Systems}$
- Frequency Inverters

Vision, Measurement & Identification

 $\bullet \ Vision \ Sensors \ \& \ Systems \ \bullet \ Measurement \ Sensors \ \bullet \ Auto \ Identification \ Systems$

Sensing

- Photoelectric Sensors Fiber-Optic Sensors Proximity Sensors
- Rotary Encoders Ultrasonic Sensors

Safety

- Safety Light Curtains Safety Laser Scanners Programmable Safety Systems
- Safety Mats and Edges Safety Door Switches Emergency Stop Devices
- Safety Switches & Operator Controls Safety Monitoring/Force-guided Relays

Control Components

- Power Supplies Timers Counters Programmable Relays
- Digital Panel Meters Monitoring Products

Switches & Relays

- Limit Switches Pushbutton Switches Electromechanical Relays
- Solid State Relays

Software

• Programming & Configuration • Runtime

